

GENERAL CHARACTERISTICS


The vacuum pressure switches VSV series use, as sensitive element, a diaphragm.

An electrical contact, NO, NC or SPDT is turned ON when the set value is reached. The adjusting screw is mounted on the head of the instruments, you can set the calibration value, within the entire measuring range.

Appropriate mechanical stops protect the electrical contact from excess of pressure.

The electrical connections, fast-on type, or screw terminals may be protected by protection cap IP54.

These pressure switches are used in pneumatic equipment, in the industrial plants, pumps, etc..

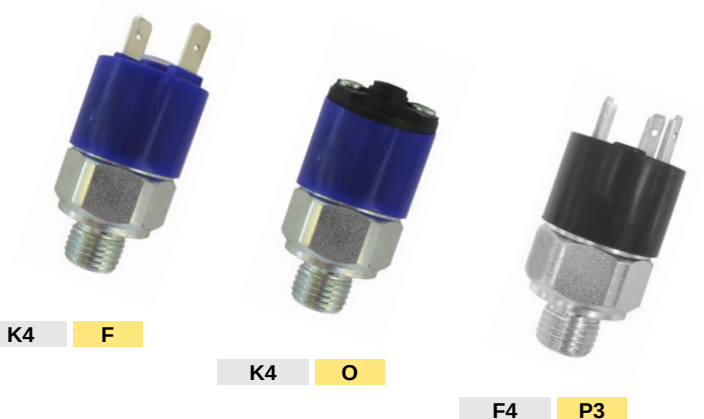

K4

F

K4

O

F4

P3

- Vacuum control from -200 to -900 mbar.
- Easy to use and adjust.
- Easy to install.

SETTING RANGES

Tab.1

Diaphragm	Tolerance value	P max	T max (°)	Code
mbar	mbar	bar	°C	
-150 ÷ -800	± 40	25	-20/+80	800

(•) Reference to NBR diaphragm

Factory set - Decreasing

00D

Factory set - Increasing

00U

► The set point value is shown in description master data ◀

TECHNICAL DATA

Tab.2

	Description	S Standard	R On request	Code
Body	Brass	S	-	(-)
	Stainless steel AISI-316	-	R	X


		°C	S	R	Code
Diaphragm and seals	NBR	-20/+80	S	-	(-)
	EPDM	-20/+90	-	R	E
	VITON	-20/+150	-	R	V
	PTFE	-30/+200	-	R	T

	Description		S	Standard	R	On request	Code
Process connection	1/8" M - UNI 228/1		-	R			0
	1/8" M - UNI 7/1		-	R			2
	1/8" M - NPT		-	R			4
	1/4" M - UNI 7/1		-	R			6
	1/4" M - UNI 228/1		S	-			1
	1/4" M - NPT		-	R			5
	M10x1 - Taper		-	R			3
Contact	250 VAC	0,5A	NA	S	-		K4A
	48 VDC	0,2A	NC	S	-		K4C
	250VAC	0,5A	SPDT	-	R		F4
	48 VDC	0,2A					
Electrical output	Faston 6,3 x 0,8 mm		NA-NC	S	-		F
			SPDT	-	R		P3
	Screw connection		NA-NC	S	-		O
Protection	-		S	-			IP00
	IP54		-	R			P1
-	Mechanical life		10 ⁶ cicli	S	-		-
-	Switching frequency		90 cycle/min	S	-		-

ADJUSTMENT


To adjust the set point, turn the screw located into the head of the pressure switch.

- Clockwise = Increase (+)
- Counterclockwise = decrease (-)

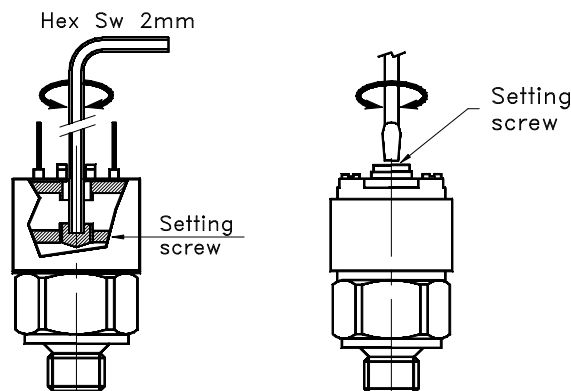


WIRING

Tab.3

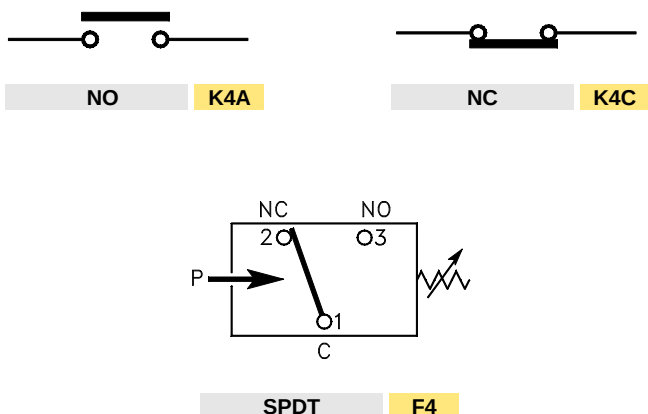

PROTECTION - on request


Tab.4

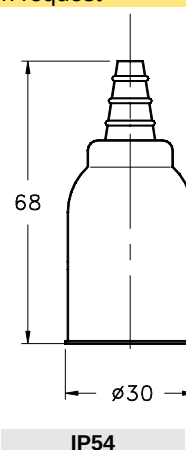


DIMENSIONS mm.

Tab.5


Terminals							
Faston				Screw			
K4A	K4C	F4		K4A	K4C		
A	B	A	B	A	B	C	Code
47	9	47	9	42	9	1/8" M - UNI 228/1	0
47	9	47	9	42	9	1/8" M - UNI 7/1	2
47	9,5	47	9,5	42	9,5	1/8" M - NPT	4
47	14,4	47	14,4	42	14,4	1/4" M - UNI 7/1	6
47	10,5	47	10,5	42	10,5	1/4" M - UNI 228/1	1
47	14,4	47	14,4	42	14,4	1/4" M - NPT	5
47	9	47	9	42	9	M10x1 - Taper	3

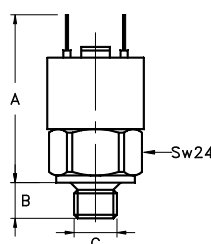

Faston - IP00
K4A - K4C **F**

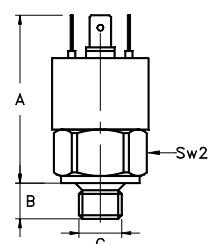

Faston - IP00
F4 **P3**

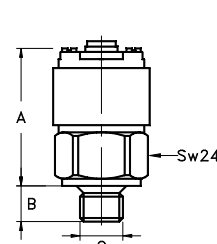

Screw terminal IP00
K4A - K4C **O**

NOMENCLATURE

VSV	K4A	800	F	(-)	(-)	0	IP00
•							
	•						
		•					
			•				
				•			
					•		
						•	
							•
P1	Protection cap - IP54						

-	Type
Tab.2-3	Contact type and wiring
Tab.1	Adjustable range or Factory set point
Tab.2-5	Electrical output - Terminals type
Tab.2	Body material
Tab.2	Diaphragm material
Tab.2-5	Process connection
Tab.2	Degree of protection
Tab.4	Accessory on request